Personal Blender
User guide

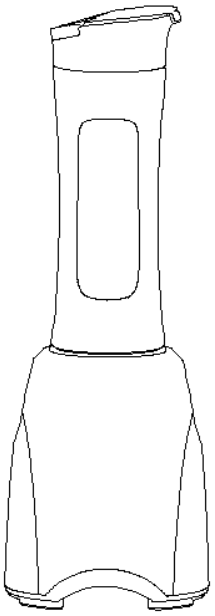

Model No: GPB101B

For Customer Services & Spare Parts please call **0845 209 7461**
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm
Or visit us at **www.productcareuk.com**

IMPORTANT:
RETAIN FOR FUTURE REFERENCE

Contents

	Page
Safety Instructions	**3**
Personal Blender Overview	**6**
Before Use	**7**
Using Your Blender	**8**
Cleaning and Maintenance	**9**
Guarantee	**10**
Customer Support	**11**
Connection to the Mains Supply	**12**

Thank you for purchasing your Abode Personal Blender.

To get the best from your new blender, take a few moments to read these instructions, and keep them in a safe place for future reference.

Should you require any further assistance, our friendly Customer Service team will be happy to help.

For Customer Services & Spare Parts please call **0845 209 7461**
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm
Or visit us at **www.productcareuk.com**

Safety Instructions

IMPORTANT SAFETY INSTRUCTIONS
READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

WARNING:

When using the electrical appliance, the below basic safety precautions should be followed:

- **1. Read all instructions.**
- **2. Before using check that the voltage power corresponds to the one shown on the appliance nameplate.**
- **3. Do not let cord hang over edge of table or counter.**
- **4. Do not place on or near a hot gas or electric burner, or in a heated oven.**
- **5. Do not operate any appliance with a damage cord or plug or after the appliance malfunction or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.**
- **6.If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.**
- **7. Avoid contacting moving parts.**
- **8. Blades are sharp, so handle carefully.**

Safety Instructions

- **9. The use of attachment, including jar, jar lid, not recommended or sold by manufacturer may cause fire, electric shock or injury.**
- **10. The appliance cannot be used for blending hard and dry substance, otherwise the blade could be blunted.**
- **11. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.**
- **12. To protect against risk of electrical shock do not put motor unit or power cord in water or other liquid.**
- **13. Do not use outdoors.**
- **14. Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.**
- **15. To reduce the risk of injury, never place cutter-assembly blades on base without jar properly attached.**
- **16. Always operate blender with cover in place.**
- **17. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.**
- **18. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.**

Safety Instructions

- **19. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.**
- **20. Children shall not play with the appliance.**
- **21. Warning: never use hot liquids or run the appliance empty.**
- **22. Save this instruction manual.**

We're here should you need us.
For Customer Services & Spare Parts please call 0845 209 7461
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm
Or visit us at www.productcareuk.com

Personal Blender Overview

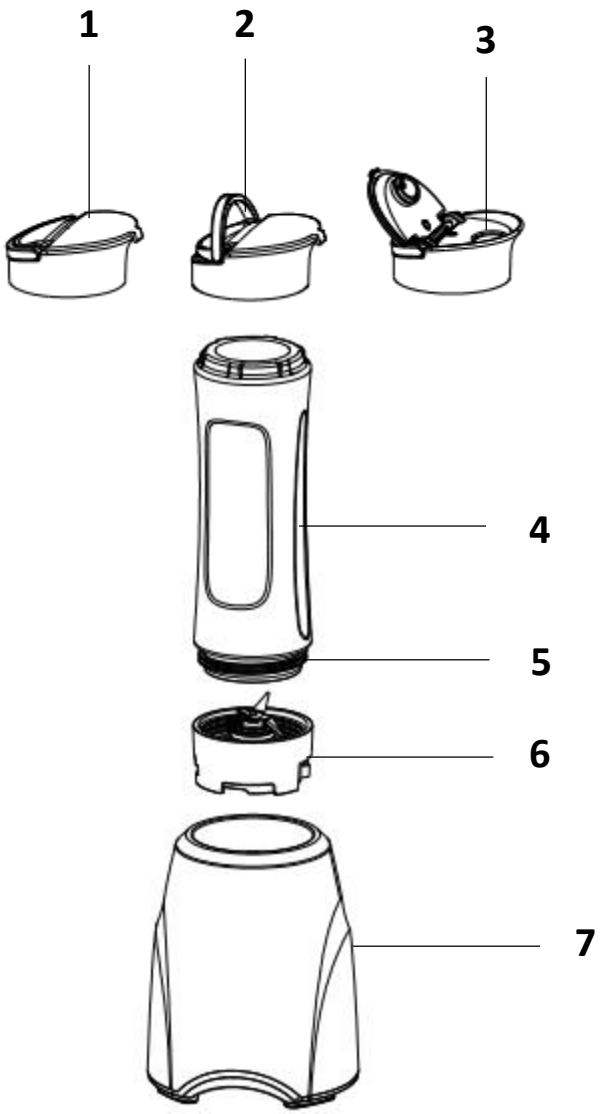

1	Bottle lid	4	Bottle
2	Lid handle	5	Opening End
3	Drinking spout	6	Blade assembly
		7	Blender base

Before Use

Check the Blender after unpacking for any visual damage or missing parts such as:

- Misaligned or damaged parts.
- Damage to the plug or cable.
- If any parts are missing or there is any damage please call customer services.

Before first use:

Mix water in the bottle one or two times then pour out.

Thoroughly wash the bottle and lid in warm water and allow to dry completely.

Warning: The blade is sharp, handle it carefully.

We're here should you need us.
For Customer Services & Spare Parts please call 0845 209 7461
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm
Or visit us at www.productcareuk.com

Using Your Blender

1. Place the blender base on a flat surface. Make sure the power outlet is unplugged.

2. Place the jar on a flat surface with the opening end facing up. Fill the jar with your favourite ingredients. Be sure not to exceed the 600ml marking. You can find recipes online should you wish.

Note: The appliance can blend ice cubes. For optimal performance, place your ingredients in the bottle in the following order: liquids, fresh ingredients, frozen fruit, yogurt and ice cream.

3. You must peel and core fruit and vegetables, then cut it into small dices around 15×15×15mm.

Note: Never use boiling liquids or run the appliance empty.

4. Attach the blade assembly on the opening end of the bottle by turning it clockwise and securing.

5. Once the blade assembly is attached to the bottle, turn the bottle upside down and insert the blade assembly into the blender base. Make sure the arrow on the blender base is aligned with the blade assembly, then turn the bottle clockwise to secure.

6. Plug the unit in to a wall outlet and the blender will begin to operate.

Note: Do not run the appliance for more than 3 minutes per time.

7. When you have finished blending, turn the bottle anticlockwise and the blender will stop operating. Lift to remove.

8. Turn the bottle so that the opening end is facing upwards. Carefully unscrew the blade assembly, turning it anticlockwise and remove.

9. Screw the bottle lid on to the opening end, turning clockwise to secure. Lift the flap on the bottle lid and drink from the drinking spout.

Cleaning and Maintenance

After you have consumed your blended beverage, you can wash out the bottle and reuse it throughout the day for water or other cold liquids.

Unplug the appliance before cleaning and ensure the unit is fully cool.

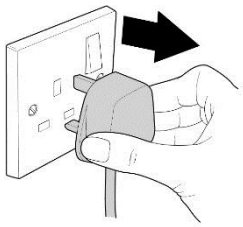

Pour warm soapy water into the bottle, plug in the appliance and mix for a few seconds.

Turn the bottle anticlockwise, remove and rinse under running water.

Wipe the outer surface of the blender base with a damp cloth.

Warning: Do not use abrasive cleaners.
Never immerse the blender base in water for cleaning.

Parts, apart from the blender base are dishwasher safe and can also be washed in warm soapy water.

Ensure all parts are thoroughly dry and reattach the blade assembly to the opening end of the bottle. You can rest the bottle lid on the bottom end of the bottle and stand it up on the blade assembly for storage.

If any problems occur, do not try to disassemble the unit, contact customer services.

Guarantee

This product is guaranteed for 12 months from the date of the original purchase. If any defect arises due to faulty materials or workmanship the faulty product must be returned to the place of purchase.

Refund or replacement is at the discretion of the retailer.

The following conditions apply:

- The product must be returned to the retailer with the original proof of purchase.
- The product must be installed and used in accordance with the instructions contained in this instruction guide and any other instructions for use which has been supplied.
- It must be used for domestic purposes only and for its intended use.
- This guarantee does not cover wear and tear, damage, misuse or consumable parts.

This does not affect your statutory rights.

We're here should you need us.
For Customer Services & Spare Parts please call 0845 209 7461
Opening times: Monday - Friday 8am – 6pm & Saturday 9am – 1pm
Or visit us at www.productcareuk.com

Customer support

You can attach your receipt to this page for proof of purchase.

We're here should you need us
For Customer Services & Spare Parts please call
0845 209 7461
Opening times: Monday - Friday 8am – 6pm &
Saturday 9am – 1pm
Or visit us at **www.productcareuk.com**

Produced for:
Asda stores Ltd.
Leeds
LS11 5AD

Disposal information

This symbol is known as the 'Crossed-out wheelie bin Symbol'. When this symbol is marked on a product/batteries, it means that the product/batteries should not be disposed of with your general household waste.

Only discard electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your co-operation is vital to make sure the success of these schemes and for the protection of the environment. For your nearest disposal facility, visit www.recycle-more.co.uk or ask in store for details.

We reserve the right due to possible changes to design to alter the instruction manual without prior notice.

Connection to the Mains Supply

WARNING- THIS APPLIANCE MUST BE EARTHED

This appliance is designed to operate from a mains supply of AC230V - 240V ~ 50/60HZ.

Check that the voltage marked on the product corresponds with your supply voltage.

This product is fitted with a 13A plug complying with BS1363.
If this plug is unsuitable or needs to be replaced, please note the following:

Important: The wires in the mains lead are coloured in accordance with the following code:

GREEN/YELLOW-EARTH
BLUE-NEUTRAL
BROWN-LIVE

Connection to the Mains Supply

For UK use only – Plug fitting details (where applicable):
As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The GREEN/YELLOW wire is the EARTH and must be connected to the terminal which is marked with the letter E or by the earth symbol or coloured GREEN or
GREEN/YELLOW.
The BLUE wire is the NEUTRAL and must be connected to the terminal marked with the letter N or coloured BLACK.
The BROWN wire is the LIVE wire and must be connected to the terminal marked with the letter L or coloured RED.

Always ensure that the plug cord grip is fastened correctly.

If a 13A (BS1363) fused plug is used it must be fitted with a 13amp fuse conforming to BS1362 and be BSI or ASTA approved.

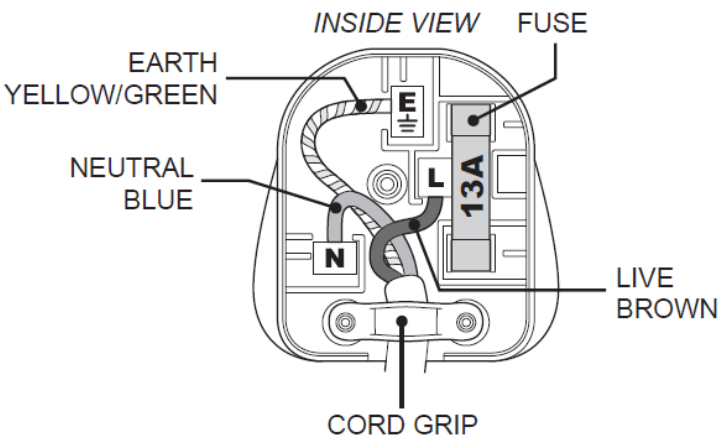

abode

Model number: GPB101B

Site code:
15A.09.14.889

R1